

TROUBLESHOOTING PROBLEMS KNOWN BY DISPLAY (FB – 6 Series)

Check if any warning or error code is displayed or how the problem occurs.
For each step of troubleshooting, refer to [Explaining Each Step of Troubleshooting Flow](#).

Click the symbol which shows where the problem occurred.


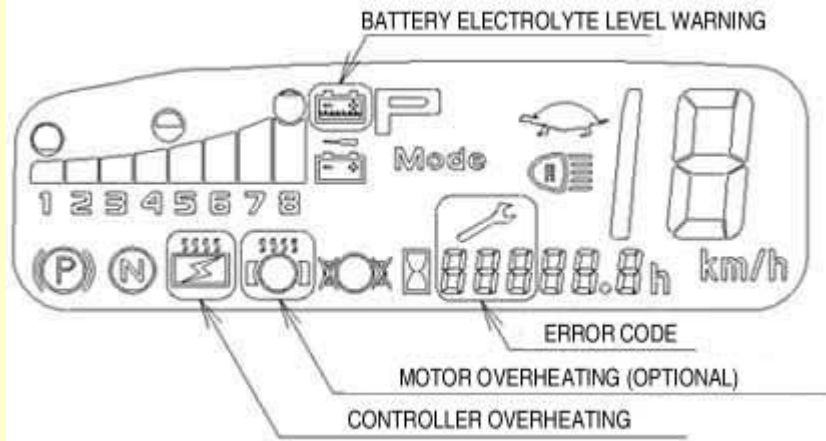


Table of Error Codes

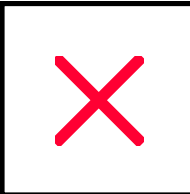

Error code	Detail of error	Remarks
1 0 1	Accelerator wire broken	Code to be displayed by turning on the key switch.
1 0 2	Drive motor current sensor defective	
1 0 3	Drive safety circuit turns on	
1 0 5	Abnormal plugging of regenerative circuit	
1 0 6	Controller thermo sensor defective	
1 0 7	Drive motor current abnormal	
2 0 1	Lift lever sensor wire broken	
2 0 2	Load handling motor current abnormal	
2 0 3	Load handling safety circuit turns on	
3 0 1	Accelerator wire broken	
3 0 3	Drive safety circuit turns on	
4 0 1	Lift lever sensor wire broken	
4 0 3	Load handling safety circuit turns on	

If more than one error occur at the same time, they are displayed in order every 4 seconds.
An error code comes off when the key switch is turned off.