

TROUBLESHOOTING PROBLEMS KNOWN BY DISPLAY (FB – 7 Series)

- Check if any error code is displayed or how the problem occurs.
- For how to use troubleshooting guide, refer to [Explaining Each Step of Troubleshooting Flow](#).

Click the symbol which shows where the problem occurred.

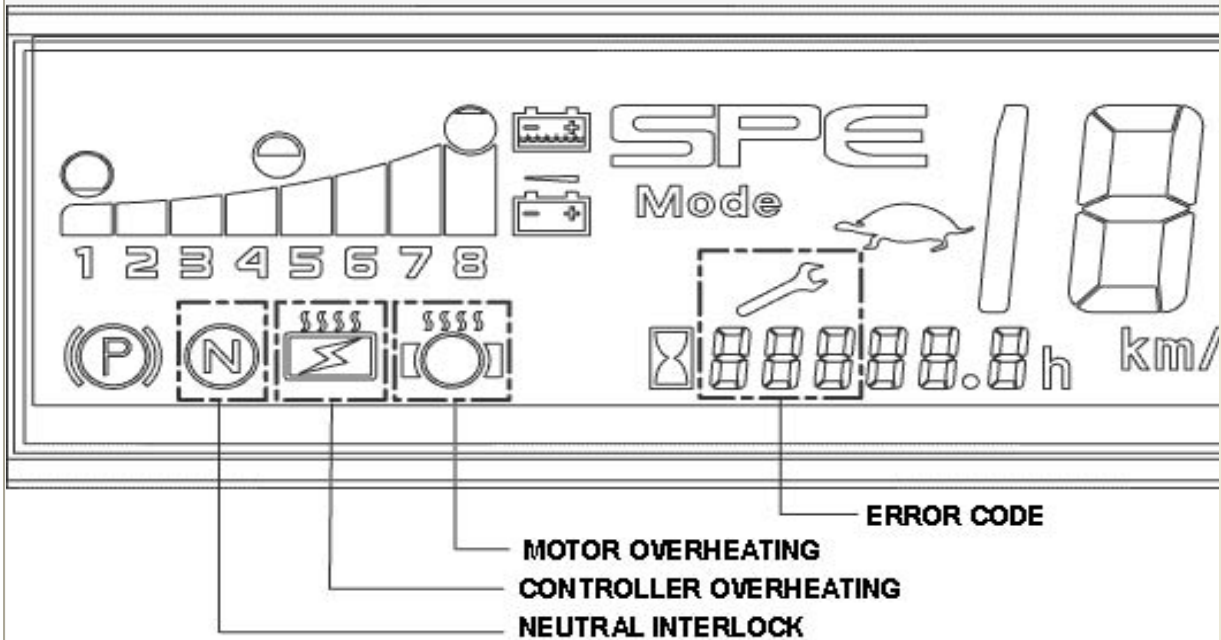


Table of Error Codes

- For how to read LED error codes, click [Error Code Shown by LED](#).

Click the error code.		
Display error code	Detail of error	LED error code
301	Accelerator output defective	17
302	Traveling current sensor output defective	19
303	Drive FET power module short-circuited	01
	Drive FET power module open	02
	Drive quick charge error	69
305	Drive contactor short-circuited	03
306	Drive contactor open	04
307	Blown main fuse for drive	20

308	Rotation sensor A defective	41
	Rotation sensor B defective	42
401	Load handling lift potentiometer defective	35
402	Load handling current sensor output defective	34
403	Load handling FET power module short-circuited	30
	Load handling quick charge error	70
	Power steering transistor short-circuited	50
404	Load handling FET power module open	31
	Power steering transistor open	56
405	Load handling contactor short-circuited	37
	Power steering contactor short-circuited	51
406	Load handling contactor open	33
	Power steering fuse/contactor open	52
407	Blown main fuse for load handling	45
501	MD contactor drive transistor coil defective	07
	F/R switch defective	16
	Load dump error (battery overvoltage protection)	86
	Load handling contactor drive transistor/coil defective	38
	EPROM sum error (Other serious error)	82
	EPROMACK error (Other serious error)	83
	Power steering contactor drive transistor coil defective	53
502	Drive motor temperature rise	25
	Drive motor thermo sensor defective	27
	Inching over	67
	Drive motor overspeed	91
503	Power steering torque sensor output defective	54
504	Drive controller thermo sensor defective	22
	Load handling controller thermo sensor defective	36